# HUAYU®

## HR-E877

Thank you for using the remote controller. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setting it. However, if it could not work well, it should be set with the following methods before remote controlling your TV. The remote controller would not lose its memory when the power is down so that you could replace the battery without resetting it.

## Introduction

HR-E877 is a brand new kind of universal TV remote controller which could meet needs of different levels. It is applied to almost all types of TV sets, including old and new types, types with well-known brands admitted home and abroad, inferior brand types and so on. Common functions and menu buttons are all available. It is comfortable to hold the remote controller due to its lightweight design and it is easy to use. Thus it makes HR-E877 an ideal choice to offer your life with more convenience when the original TV remote controller is lost, damaged, or needs replacement.

## Panel Description

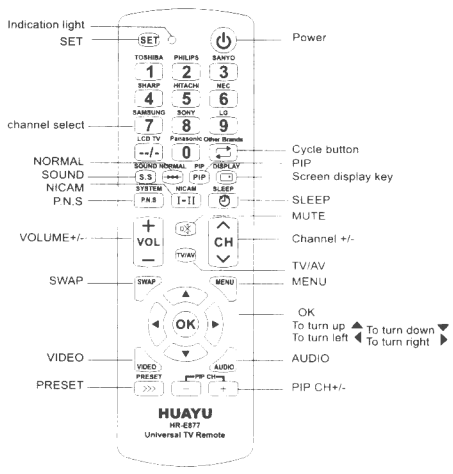


## Battery Installation

In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA batteries (non-rationed), which is shown in the figure.

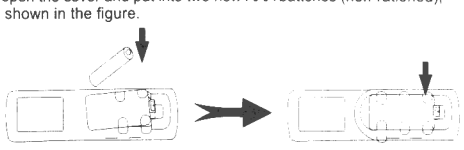

## Battery Description

- The remote controller is a low-power product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
- Please do not put old and new batteries or different types of batteries together.
- In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
- You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

## Settings of Remote controller:

The remote controller has the following methods of settings, please choose any of them.

### A. Inputting code:

1. Turn on TV manually, make it in a normal play state, point the remote controller at the TV, and then find the corresponding 3-digit code of the corresponding brand from the code table.




2. Press the "Settings" button for about 3 seconds till the work light lights, and then release the button. Thus it becomes the code input state.




3. Enter the first set of three-digit code in order. Whenever one digit is input, the work light would flash once. When all of the 3 digits are input, the work light would be off, which means the setting has been finished. If the code is more than one set, please use the first one.




4. Test whether other function buttons could work well, such as the "Mute" button.

※ If not, repeat steps 2-3 until you find a suitable set of code.

### B. Manually searching for the code:

1. Manually switch on theTV set, and aim the remote control at the TV set, as shown in the figure:

2. Press and hold the "Settings" button for about 3 seconds till the work light is on, and then release it. It becomes the manually searching state.

3. Press the "VOLUME +" key one time and then release it to see whether a volume symbol appears on the TV screen. If no such symbol occurs, repeat the procedure.

4. After the volume symbol is displayed, test other function buttons (except the "Settings", "Power" and "Volume" buttons). If they work well, press the "Settings" button immediately and the work light would be off, which means the setting has been finished.

※ If keying does not work, reset from Step 2.

### C. Automatically searching code:

1. Turn on TV manually, make it in a normal play state, point the remote controller at the TV




2. Press and hold the "Settings" button for about 3 seconds. Do not release the button until the work light is on.




3. Press the "Power" button once, and the worklights would continuously flash, indicating the automatically searching code mode has been activated. Pay attention whether the TV volume symbol is displayed. If so, press the "Settings" button immediately to stop the automatic search and the work light would be on for a long time.

4. Test whether other function buttons (except the "Settings", "Power" and "Volume" buttons) could work well. If they work well, press the "Settings" button immediately and the work light would be off, which means the setting has been finished. If not, repeat steps 3-4 until you find the suitable set of code.



### D. Point to Point Brand Searching:

1. Turn on TV manually, make it in a normal play state, point the remote controller at the TV. Find the symbol of your TV brand, such as PHILIPS with its symbol "2".

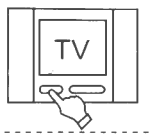


2. Press and hold the "Settings" and "the corresponding brand symbol" button. Do not release the buttons until the work light is on.

3. Press the "Volume +" key and release it, the work light would flash once. Pay attention whether the TV volume symbol is displayed. If not, please repeat this step.

**Brand symbol table**

| | | | | | |
|---|---|---|---|---|---|
| 1 | 2 | 3 | 4 | 5 | 6 |
| TOSHIBA | PHILIPS | SANYO | SHARP | HITACHI | NEC |
| 7 | 8 | 9 | 0 | -/- | |
| SAMSUNG | SONY | LG | Panasonic | LCD TV | OTHER BRANDS |

## Warm Tips:

If there are some problems when setting or using the remote controller, try the following methods to solve them:

- When setting the remote controller, please follow the "Inputting code" steps carefully. If the remote controller could not be used after setting the first set of code, please try the other sets of code in order. If none of the codes could make the remote controller work well (or if your home appliances are not in the list), please try "Automaticall searching code".
- If you make mistakes when inputting the code, you could just re-input the three-digit code as long as the work light is on. However, if the work light is off, you need to reset by the first step.
- Please wait patiently when searching the code manually since there are so many sets of code.

## Technical parameters

Remote Controlling Distance: About 8 meters (varies by different types)
Battery Type: two pieces of AAA Batteries

## After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

## Русский Russian

### Настройка пульта ДУ:

Настоящий пульт ДУ настроится следующими способами, вы можете выбратьодин из них.

### А. Способ входного кода:

1. Вручную включите телевизор, когда телевизор находится в состоянии нормального воспроизведения, направляйте пульт ДУ на приемник. Найти трехзначный код соответствующей марки со списка кодов.




2. Нажмите, удержите кнопку "настройки" 3 секунды, пока индикатор работы зажигается, освободите кнопку. При этом телевизор находится в состоянии входа кода.

3.В очереди введите первую группу трехзначных кодов. При вводе каждои цифры индикатор мигает один раз, после завершения ввода 3 цифры индикатор работы гасит. Если число групп кодов превысит 1, надо сначала выбрать первую группу кодов.




4. Проверьте другие функциональные кнопки, как кнопку "немоты". Если другие функциональные кнопки не могут нормально работать, повторите операции шаг № 2-3, пока не найдется пригодный код.

### В. Способ ручного поиска кода:

1. Вручную включите телевизор, когда телевизор находится в состоянии нормального воспроизведения, направляйте пульт ДУ на приемник.

2.Держа кнопку "настройки" 3 секунды, освободите кнопку , когда индикатор работы зажигается, при этом телевизор начинает авто поиск.

3. Нажмите кнопку"громкость +", затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.

4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальны, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.

### С. Способ авто поиска код

1. Вручную включите телевизор, когда телевизор находится в состоянии нормального воспроизведения, направляйте пульт ДУ на приемник.
2. Держа кнопку "настройки" 3 секунды, когда индикатор работы зажигается, освободите кнопку .
3. Нажмите кнопку"питания", при этом индикатор непрерывно мигает, то означит, что программа авто поиска кода уже запускается. Проверьте, появляется ли символ громкости, при появлении символа громкости немедленно нажмите кнопку"настройки", чтоб временно оставить авто поиск, при этом индикатор постоянно зажигается.
4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальны, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена. Если другие кнопки работают ненормально, повторите операции шаг 3-4, пока не обнаружится подходящий код.

### D. Способ поиска марки методом точки-точки

1. Вручную включите телевизор, когда телевизор находится в состоянии нормального воспроизведения, направляйте пульт ДУ на приемник. Найти символ соответствующей марки вашего телевизора, например HiSense"2".

2. Держите кнопку"настройки" и кнопку "символа соответствующей марки", когда индикатор зажигается, освободите кнопки.




3. Нажмите кнопку"громкость +", затем освободите, индикатор мигает один раз, если не появляется символ громкости, повторит эту операцию.




# HUAYU

Bold code for the LCD TV

**CODE FORM FOR THE COMPONENTS**

| Brand | Code |
|---|---|
| AIWA | 009,057,058,377,378 |
| AKAI | 033,053,056,079 |
| AOLINPIKE | 033,053,056,079 |
| ANHUA | 017,001,032,047 |
| AOLINPU | 104 |
| BENQ | 294 |
| BAIHUA | 016,025,033,053,056,079 |
| BAIHEHUA | 023,024,040,043 |
| BAILE | 016,025,012,019,026,027,028,029,030,031,042 |
| BAOSHENG | 011,025,016 |
| BAOHUASHI | 033,053,056,079 |
| BeiJing | 008,012,011,019,016,023,024,025,027,028,029,030,031,033,040,043,050,053,056,026,079,091,039,042,051,021,122,126,233,265,298,351,376 |
| CAILING | 102 |
| CAIHONG | 011,025,016 |
| CAIXING | 023,024,040,043,073 |
| CHANGCHENG | 011,016,017,023,024,025,033,040,043,053,056,001,012,019,027,026,028,029,030,031,042,079 |
| CHENGDU | 011,025 |
| CAHNGFENG | 011,053,056,045,024,079,033 |
| CHANGFEI | 011,016,025,042,123 |
| CHANGHAI | 011,025,016,123 |
| CHUNLAN | 142,107,131 |
| CHUNFENG | 016,025,033,053,056,079,124 |
| CHUNSUN | 011,025,016 |
| CONROWA | 000,006,007,008,010,016,025,033,053,055,056,045,046,048,073,099,131,204,258 |
| CHANGHONG | 000,008,009,091,092,093,010,011,014,016,026,028,033,051,052,057,058,067,071,086,087,088,100,159,162,182,183,184,226,288,289,290,291,292,297,300,336,337,338,317,372,413,414,438,448 |
| CHUANGJIA | 073,101,376 |
| DAEWOO | 012,042,031,369,141,408,449 |
| DETRON | 212 |
| DONGJIE | 073,097,101 |
| DONGDA | 016,025 |
| DONGHAI | 016,025 |
| DONGLIN | 077 |
| DIGITEC | 214,150,147 |
| FEILU | 011,016,025 |
| FEIYUE | 011,016,023,024,025,040,043 |
| FEILANG | 016,025 |
| FEIYAN | 033,053,056,079 |
| FULI | 047 |
| FUJITSU | 048 |
| GOLDSTAR | 009,019,023,024,040,043,098,140 |
| GANXIN | 011,017,023,024,027,040,041,043 |
| GUANGTAI | 097 |
| HUAQIANG | 033,053,056,079,236 |
| HUAFA | 007,016,025 |
| HISENSE | 000,006,007,008,010,014,015,025,045,046,057,102,103,105,107,115,116,128,129,130,131,138,139,171,172,173,174,185,186,187,188,189,190,191,224,225,233,265,266,269,270,271,273,274,299,304,305,306, 307,309,318,319,339,340,341,342, 348,417,418 |
| HAIER | 103,105,112,118,119,175,178,185,186,187,188,201,205,206,218,272,356,380,415,416 |
| HITACHI | 007,015,014,027,000,006,008,010,048,179,228,373,419,426 |
| HITACHI FUFIAN | 007,011,015,023,024,028,033,034,040,043,053,056,060,061,065,079,102 |
| HUIJIABAN | 101 |
| HUANGHE | 011,016,023,024,025,040,043,051,103,125,155 |
| HUANGHAIMEI | 016,025 |
| HUANGSHAN | 011,016,023,024,025,032,033,040,043,053,056,079 |
| HUANGLONG | 016,025 |
| HUARI | 007,033,053,056,079 |
| HAIYAN | 011,023,024,033,040,043,053,056,079 |
| HAIHONG | 016,025,026,027,028,029,030,077,103,268 |
| HAILE | 032,027 |
| HUANYU | 011,015,023,024,033,040,043,053,056,009,057,058,079 |
| HONGMEI | 003,011,016,018,023,024,025,033,040,043,056,009,057,058,079 |
| HONGYAN | 011,033,053,056,079 |
| HUODATEJI | 032,001,017,047 |
| INTEL | 213 |
| IMPERIALCOWN | 033,053,056,012,019,025,026,027,028,029,030,031,042,079 |
| JIAN SHENG | 104 |
| JUHUA | 011,023,024,033,040,043,053,056,079 |
| JINGHAI | 009,057,058,099 |
| JINGFENG | 001,011,021,022 |
| JINTA | 016,023,024,025,033,040,043,053,056,009,057,058,079 |
| JINGQUE | 011,025,016 |
| JINGQUE | 032,033,053,056,079 |
| JIAHUA | 017,047,001,032,033,101,149,207 |
| JVC | 089,161,322 |
| JINGXINGBAN | 104 |
| JINGLIPU | 038,057 |
| JIALICAI | 016,025,028,033,053,056,079,124,178 |
| JINXING | 007,008,011,013,024,025,032,033,039,051,057,065,071,073,079,091,097,102,107,138,225,227,364,367,368 |
| KUAILE | 016,025,033,053,056,079 |
| KANGHUA | 103 |
| KANGWEI | 077,101,104 |
| KUNLUN | 001,011,021,022,033,025,012,042,040,039 |
| KONKA | 011,017,029,032,034,054,067,069,071,075,076,077,078,079,080,081,107,113,117,157,163,164,165,177,210,235,250,251,252,253,254,255,256,257,301,302,303,321,323,324, 345,385,386,392,420,421 |
| KANGLI | 027,012,016,019,025,026,028,030,031,033,073,120,204,271 |
| KAIGE | 011,016,023,024,025,033,040,043,053,056,079 |
| KANGHONG | 009,058,057 |
| KANGYI | 016,025,033,053,056,079,121 |
| KANGLI | 016,023,024,025,040,043,011,026,027,028,029,042,005 |
| KONGQUE | 011,016,023,024,025,033,040,041,043,124 |
| LONGJIANG | 011,033,053,056,079 |
| LIHUA | 011 |
| LG | 024,040,098,043,140,259,260,261,422 |
| MUDAN | 001,002,011,016,020,021,022,025,032,033,039,040,043,053,056,059,063,065,079,101,107,145,146,149,218,223 |
| MEILE | 011,023,024,033,040,043,053,056,009,057,058,079 |
| MENGMEI | 023,024,040,043 |
| MANTIANXING | 114 |
| MITSUBISHI | 011,051 |
| NANSHENG | 011,033,053,056,079 |
| NANBAO | 016,025,033,053,056,009,057 |
| NIKON | 009,057,058 |
| NEC | 006,011,016,004,025,033,053,056,024,079 |
| NOBEL | 335,073,328,171,110,374,470,471 |
| OULIN | 101 |
| POLYTRON | 147,017,296,016,036,375,151,152,214,396,397,398,399,462-469 |
| NEC | 089,140 |
| PANDA | 001,011,016,021,022,023,024,025,026,028,033,040,043,053,056,009,057,058,051,062,073,079,089,091,061,124,125,181,203,204,208,263,264,296,101,373,443 |
| PANASONIC (NATIONAL) | 020,001,002,014,015,021,022,059,066,423 |
| PHILIPS | 013,023,024,039,040,043,141,241,242,377,378,424 |
| PRIMA (XIAHUA) | 011,016,024,027,025,033,053,054,055,056,060,098,080,095,079,073,209,211,217,218,229,230,231,262,295,366,295,358-363,369,370,425 |
| QINGDAO | 001,011,021,022,033,053,056,079 |
| ROWA | 011,013,016,023,024,025,040,043,096,127,248,267,268 |
| RUYI | 011,015,023,024,040,043 |
| RIHONG | 073 |
| RIZHI | 073,097 |
| RISHENG | 097 |
| SHENGCAI | 057,101 |
| SHANCHA | 011,033,053,056,079 |
| SHANGHAI | 009,011,016,017,022,023,024,025,033,040,043,053,056,057,058,079,123 |
| SHAOFENG | 011,015,000,006,007,023 |
| SHENYANG | 011,016,025,046,045,033 |
| SAIGE | 011,025,016 |
| SONGBAI | 016,025 |
| SANYUAN | 003,011,016,018,023,024,025,040,043 |
| SANJIAN | 033,053,056,079 |
| SHENGLI | 004 |
| SHERWOOD | 016,025 |
| SAV(SHANGGUANGDIAN) | 158,166,167,367,332,110,365,366,442 |
| SUMO | 214 |
| SHANSHUI | 008 |
| SANKEN | 215 |
| SEYE | 097 |
| SHENCAI | 007,016,025,033,053,056,079 |
| SANLING | 036,044 |
| SONY | 041,049,005,094,106,148,237,238,239,240,405,406,407 |
| SHUYUAN | 131,204 |
| SKYWORTH---RGB | 011,025,033,045,046,060,070,071,072,073,074,079,083,101,107,108,109,143,160,168,169,170,176,180,181,194,195,196,197,198,199,200,232,234,275,276,277,278,280,281,282,283,284,308,310,311,312,325, 326,327,346,347,309,357,390,391,396,427 |
| SONGDIAN | 101 |
| SHARP | 003,018,016,025,135,136,137,371,425 |
| SAMSUNG | 008,011,016,021,024,025,033,037,039,040,043,050,051,091,113,123,351,379,375,376,432,107 |
| SANYO | 008,000,007,014,015,033,035,053,056,079,105,132,133,134,202,223,352,353,354 |
| TOSHIBA | 000,014,016,027,033,053,056,007,008,015,028,030,089,090,091,079,159,285,286,287,130,393,355,431 |
| TOBO | 016,025,033,053,056,077,079,101,103 |
| TAISHAN | 011,016,025,042,038,031,030,029,028,027 |
| TIANE | 003,011,018 |
| TONGGUANG | 033,053,056,079 |
| TIANKEBAN | 101 |
| TCL | 051,053,068,071,073,082,083,084,085,110,111,144,156,199,209,216,243,244,245,246,247,248,249,313,314,315,316,317,320,343,344,349, 350,382,383,384,428,429 |
| TIANGENGBAN | 101 |
| WARUMAIA | 031,012,042 |
| WEIPAI | 016,025 |
| XIANGYU | 016,025,032 |
| XUELIAN | 023,024,040,043,009,057,058 |
| XINAGHAI | 016,025,033,053,056,079 |
| XIANGYANG | 033,053,056,079 |
| XINGFU | 016,025 |
| XINRISONG | 009,057,058,101 |
| XIHU | 011,023,024,033,038,040,043,053,079,098,131,204,219,220,221,222 |
| XINXIBAN | 104 |
| YOULANASI | 123 |
| XINMENGBAN | 104 |
| YOULANASI | 011,023,024,040,043 |
| YOUSIDA | 016,025,009,057,058 |
| YINGGE | 016,023,024,025,040,043 |
| YUHANG | 016,025 |
| YONGGU | 016,023,024,025,040,043 |
| YONGBAO | 009,057,058 |
| ZHUHAI | 016,025,042 |
| 888 | 033,053,056,079 |
| OTHER BRAND | 036,044,057,073,077,097,101,102,103,104,106,114,178,293,328-335,381-392,393,394,395,397,398,399,400,402,403,404,407,408,409,410,411,412,413,414,415,421,422,428,455-461 |
| TSINGHUA TONGFANG | 368,369,394,430,440,441 |
| SUKAWD | 371,443 |
| BOIGLE | 372,472 |
| SHINCO | 395,446 |
| OTHER LCD BRADN | 370,445 |
| BBK | 417 |
| INSIGNIA | 447 |
| THOMSON | 450,451 |
| GRUNDIG | 452,453 |
| MITSUBISHI | 454 |

B0063809